



## Resetting Fish Hawk LCD to factory default

Begin with display powered off.

Press and HOLD the SET button, then press and release the POWER button.

Continue HOLDING the SET button in. The display will automatically begin running through the calibration settings and show the values that have been changed. The values will flash 10 times and then stop with all zeros and no flashing decimal points.

Now RELEASE the SET button.

Press and release the SET button once more to restore factory settings.